GoodNight Stars

Owner's Manual

WARNING

For your child's safety. Please read these instructions and keep for future reference.

To prevent the risk of strangulation: Do not place in crib or child's sleeping environment. Do not attach strings or straps to the toy.

- Toy must only be used under adult supervision.
- Remove and discard all packaging and packaging fasteners before giving this toy to a child.
- Do not use the product if any components are broken or missing.
- Before each use, ensure that the product and all its components are not damaged. If damaged or broken, immediately discard the toy.
- Do not use accessories or replacement parts other than those approved by Chicco.

Cleaning

- To prevent damage to the electronics, do not submerge the toy in water. Only use a soft damp cloth to clean the toy.
- Protect the toy against heat, dust, sand, and water.

Removing and Inserting Batteries

The toy uses 3 AA 1.5 volt batteries. Batteries must only be installed by an adult. Always keep batteries and tools out of reach of children.

- To replace the batteries, loosen the screw holding the battery cover with a Phillips screwdriver and remove the battery cover. Insert the new batteries; checking to make sure the polarity (+/-) on the batteries matches the markings on the product. Replace the battery cover and secure with the screw.
- Always remove exhausted batteries from the product to avoid damage by possible battery leakage.
- Always remove batteries when the product is not going to be used for long periods of time.
- It is recommended to use alkaline batteries of the same type in this product.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad) batteries. Do not mix old and new batteries.
- Always dispose of batteries properly.
- Do not short circuit battery terminals.

For More Information

If you have any questions or comments about this product, or are missing any of the parts, please contact us in one of the following ways:

(877)-424-4226

info@chiccousa.com

www.chiccousa.com

1826 William Penn Way
Lancaster, PA 17601

IS0075.1E

©2012 Artsana USA, INC. 09/12

1

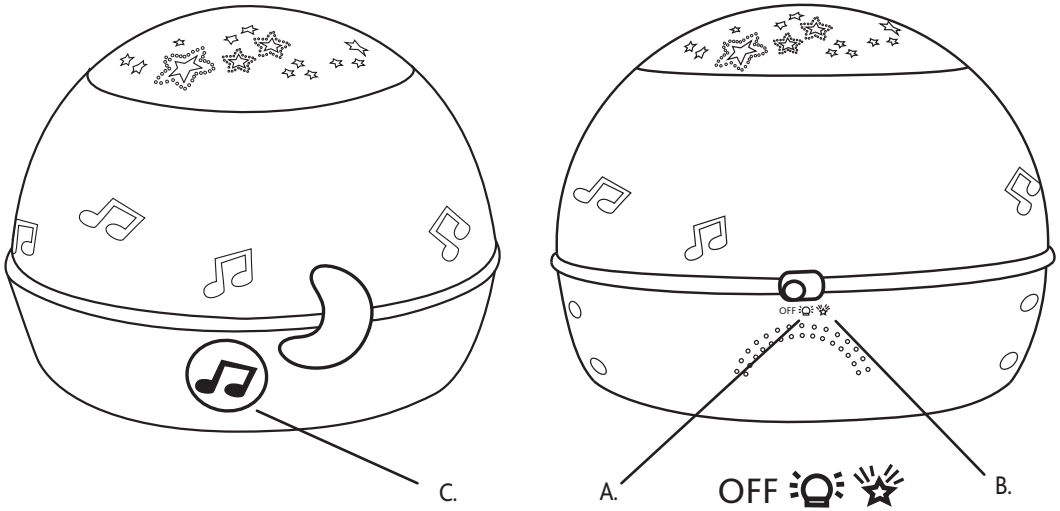

The product has 2 light mode functions (A) LAMP, (B) PROJECTOR and 1 musical mode function (C) MUSICAL NOTE BUTTON.

Turning the Toy ON/OFF:

There are 2 different user modes to choose from: (A) LIGHT, or (B) PROJECTOR.
Use the switch to select a light effect mode which will start automatically.
(A) LIGHT MODE - Activates the colored lights in the luminous globe.
(B) PROJECTOR MODE - Starts the projection of colored stars.
Both light effects will continue for 10 minutes, after which the product will switch to stand-by mode. To interrupt/start the light effects, press the moon button on the front of the product. The light projection effect is best visible when the room is completely dark. Turn the switch on the back of the device to "OFF" to turn the appliance off completely.

How to play music:

Switch the product ON and select (A) LIGHT mode or (B) PROJECTOR mode; now press the (C)MUSICAL NOTE BUTTON, to start the music compilation of 2 classical tunes (Bach, Rossini), 2 New Age tunes and 2 night-time nature sounds.
When operating in (A) LIGHT mode, the music will play for around 6 minutes and then switch to stand-by mode.
When operating in (B) PROJECTOR mode, the music will play for around 12 minutes before switching to stand-by mode.

FCC Information

Caution: changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

chicco

www.chiccousa.com